


Follow Flite Screw Preparation Instructions

Our standard coating thickness options for Follow Flite are as follows:

- .005" per side or .010" overall
- .010" per side or .020" overall.



Undercut Option #1
Start undercut at the front of the pocket.



Undercut Option #2
Start undercut at the end of the bearing undercut.



Do not undercut the bearing.
We do not coat the bearing
on Follow Flite screws.

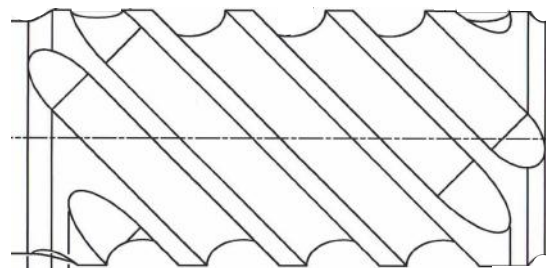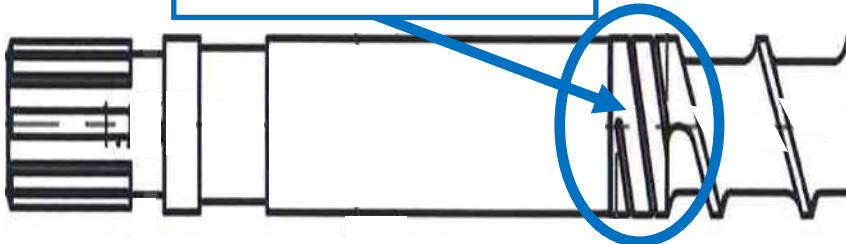

Do not undercut mixers. We
do not coat mixers on Follow
Flite screws.